

PRBOX4UAPRO



1/4-20 Mount

Remove tripod release plate from tripod
Remove center screw from underneath tripod release plate
(tripod release plates vary with removable center screw)
Insert 1/4-20 threaded stud from underside base of tripod release plate and secure on tripod

Align PRomptBox® with tripod stud adapter and secure with thumb nut*
Lock down frame to tripod release plate**
Removable sidewalls for access to center of base frame

****Align PRomptBox® Frame ONLY do not align with Glass Assembly and tablet installed**

PRomptBox® Optional Bracket Assembly

Align Bracket Assembly to tripod pan head
Align PRomptBox® from above Bracket Assembly
Secure with 1/4-20 tripod screw adapter thumb nut**
Lock down bracket and frame to tripod pan head

Cover 1/4-20 tripod screw adapter with black backed tape or opaque black material due to various hardware finish to avoid ghosting

****Align PRomptBox® Frame and Bracket ONLY do not align with Glass Assembly, Camera, and Tablet Device installed**

***1/4-20 tripod screw adapter by other**



New Bracket Assembly Design

Available direct from PRomptBox®

1/4-20 bracket design for small to medium size camera
DSLR, camcorder, compact HD

Tapped bracket also available

Contact us at info@prbox4u.com
415-716-3410

